

SERVICE CONNECTION

AC+ Input AC+
 AC- Input AC-
 Equipment Ground EQ GND

EMERGENCY PRE-EMPT

		<u>Detector Number</u>			
		1-NB	2-EB	3-SB	4-WB
Main Detection	(Orange)	511	521	531	541
	(Yellow)	512	522	532	542
	(Blue/Bare)	513	523	533	543
Advance Detection	(Orange)	511	521	531	541
	(Yellow)	A1	B1	C1	D1
	(Blue)	513	523	533	543
	(Orange)	511	521	531	541
	(Yellow)	A2	B2	C2	D2
	(Blue/Bare)	513	523	533	543

VEHICLE DETECTION

Loop Channel 1 (a)	B	01	05	09	13	17	21
Loop Channel 1 (b)	W	01	05	09	13	17	21
Loop Channel 2 (a)	B	02	06	10	14	18	22
Loop Channel 2 (b)	W	02	06	10	14	18	22
Loop Channel 3 (a)	B	03	07	11	15	19	23
Loop Channel 3 (b)	W	03	07	11	15	19	23
Loop Channel 4 (a)	B	04	08	12	16	20	24
Loop Channel 4 (b)	W	04	08	12	16	20	24



SIGNAL EQUIPMENT WIRING CHART

DRAWING NUMBER	SL-351-1
SCALE	NONE
REVISION DATE	2/24
DEPARTMENT	TRANS