

NOTES:

- 1. MEANDER SIDEWALK AROUND MAILBOX TO MAINTAIN FULL WIDTH OF SIDEWALK.
- 2. COORDINATE MAILBOX LOCATION WITH LOCAL POSTMASTER AND ENSURE MAILBOX SHALL NOT IMPACT SIGHT LINES.
- ADDITIONAL REQUIREMENTS PER REVIEW ENGINEER FOR INSTALLATION ALONG ARTERIAL STREETS.
- 4. FOR USE WITH USPS APPROVED MAILBOXES ONLY.
- 5. ANCHOR BOLTS SHALL BE CUT FLUSH TO MOUNTING SURFACE.
- 6. ALL SIDEWALK INSTALLED PER C.O.B. STD. DWG. SW-110-1.
- 7. FOR INSTALLATION AT LOCATION WITHOUT CURB, TOP OF CONCRETE PAD SHALL BE FLUSH WITH GROUND SURFACE. PLACEMENT SHALL BE APPROVED IN ADVANCE BY REVIEW ENGINEER.
- 8. SEE SECTION 3.6.3 OF THE DESIGN MANUAL FOR CLEAR ZONE REQUIREMENTS.
- 9. SEE SECTION 3.6.4 OF THE DESIGN MANUAL FOR BREAKAWAY REQUIREMENTS.

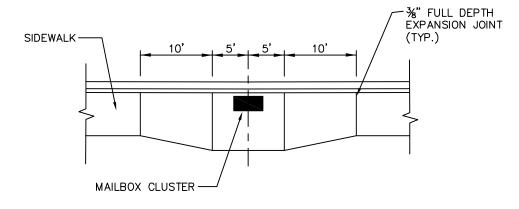

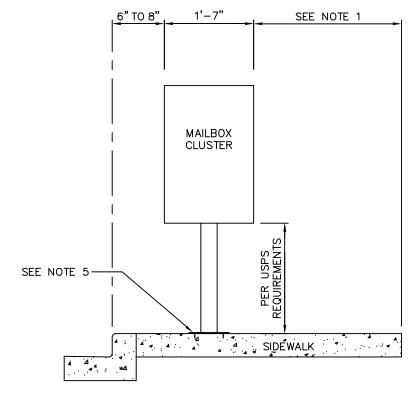

SECTION NTS

SIDEWALK TRANSITION DETAIL

NTS



CLUSTER MAILBOX DETAIL

DRAWING NUMBER	RC-280-1
SCALE	NONE
REVISION DATE	1/25
DEPARTMENT	TRANS