

NOTES:

1. MEANDER SIDEWALK AROUND MAILBOX TO MAINTAIN FULL WIDTH OF SIDEWALK.
2. COORDINATE MAILBOX LOCATION WITH LOCAL POSTMASTER AND ENSURE MAILBOX SHALL NOT IMPACT SIGHT LINES.
3. ADDITIONAL REQUIREMENTS PER REVIEW ENGINEER FOR INSTALLATION ALONG ARTERIAL STREETS.
4. FOR USE WITH USPS APPROVED MAILBOXES ONLY.
5. ANCHOR BOLTS PER THE MAILBOX CLUSTER MANUFACTURERS RECOMMENDATIONS. ANCHOR BOLTS SHALL BE CUT ½" ABOVE THE ANCHORING NUT.
6. ALL SIDEWALK INSTALLED PER C.O.B. STD. DWG. SW–110–1.
7. FOR INSTALLATION AT LOCATION WITHOUT CURB, TOP OF CONCRETE PAD SHALL BE FLUSH WITH GROUND SURFACE. PLACEMENT SHALL BE APPROVED IN ADVANCE BY REVIEW ENGINEER.
8. SEE SECTION 3.6.3 OF THE DESIGN MANUAL FOR CLEAR ZONE REQUIREMENTS.
9. SEE SECTION 3.6.4 OF THE DESIGN MANUAL FOR BREAKAWAY REQUIREMENTS.

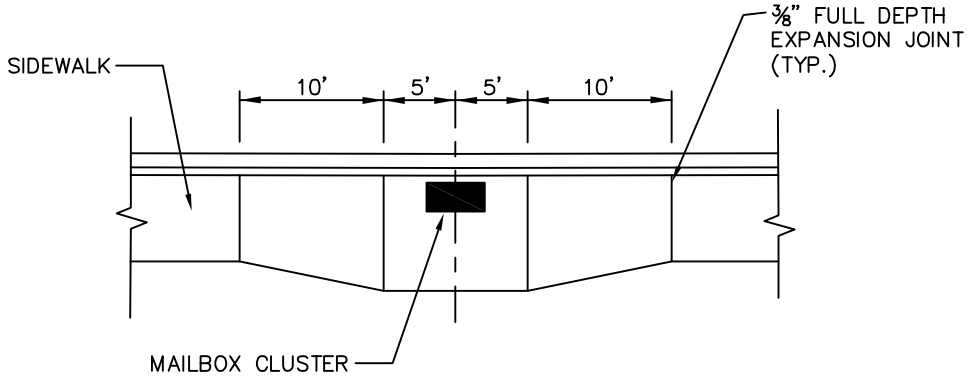

SIDEWALK TRANSITION DETAIL
NTS

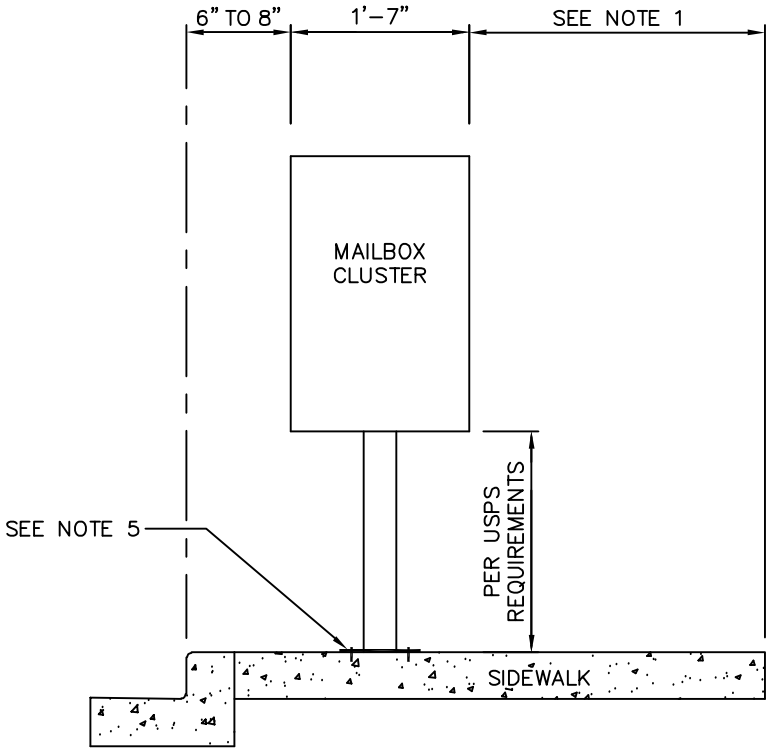

SECTION
NTS

City of Bellevue

CLUSTER MAILBOX DETAIL

DRAWING NUMBER	RC–280–1
SCALE	NONE
REVISION DATE	10/26
DEPARTMENT	TRANS