


NOTES:

- 1. SEE ENGINEER FOR POCKET LENGTH AND FOR LAYOUT AND PLACEMENT OF TURN ARROWS.
- 2. DIMENSIONS SHOWN MAY BE MODIFIED TO ACCOMMODATE DRIVEWAYS.

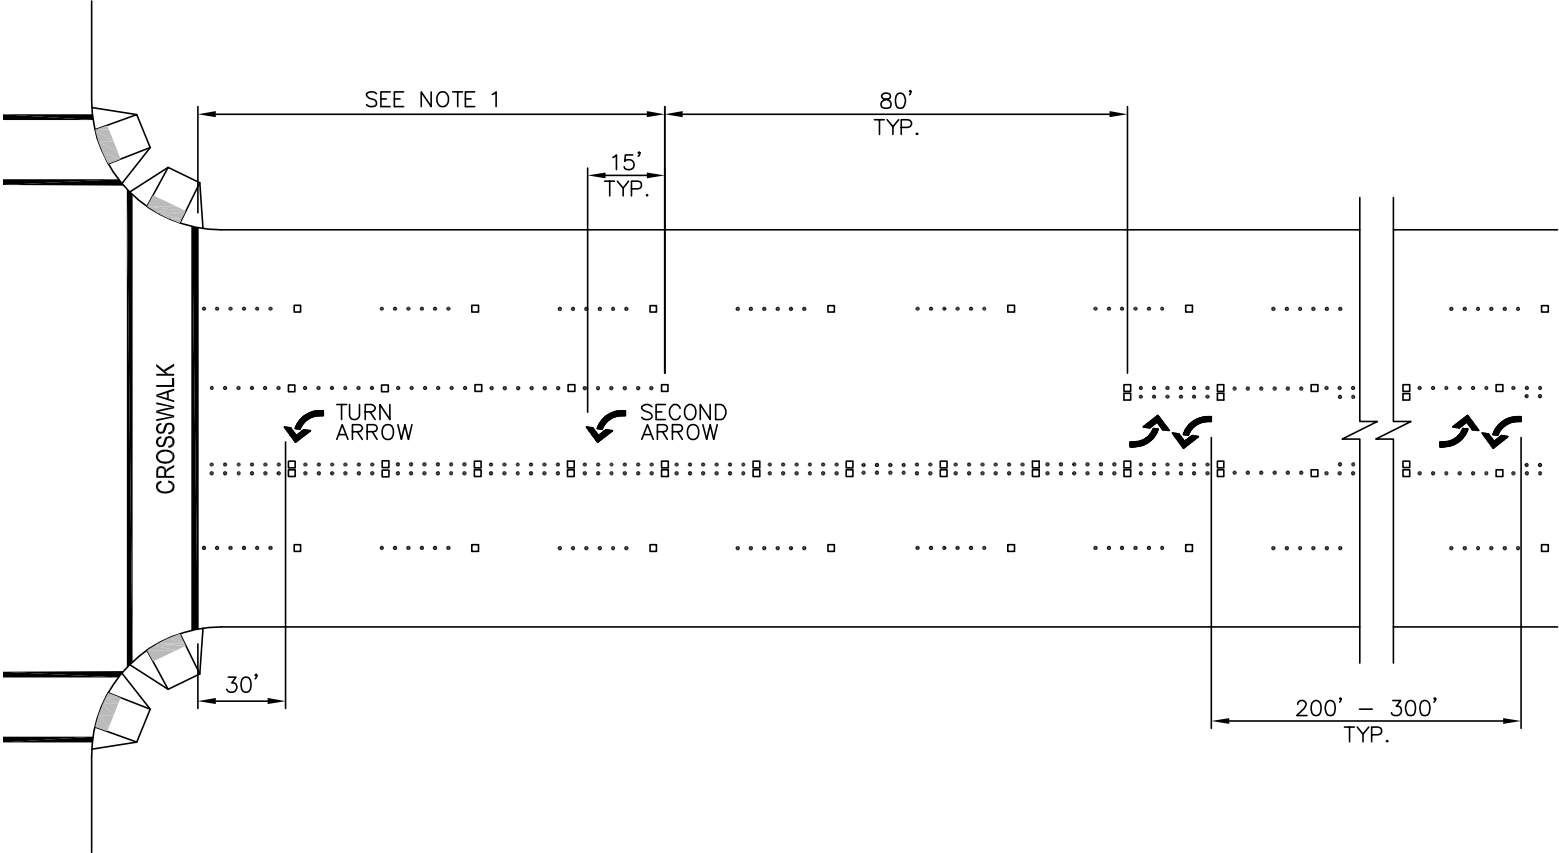

**LEFT TURN AND
TWO WAY LEFT TURN LANE**

DRAWING NUMBER	CH-200-1
SCALE	NONE
REVISION DATE	12/16
DEPARTMENT	TRANS